


LED VideoPlus

Installation and Operating Instructions

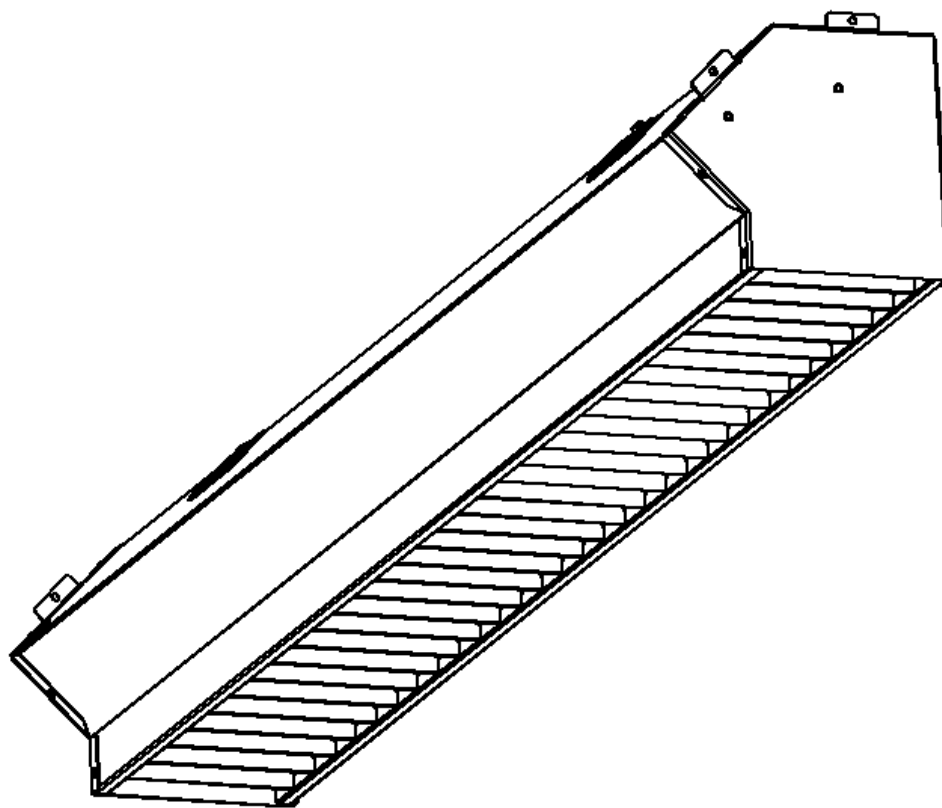

580 Mayer Street, Building #9, Bridgeville, PA 15017, USA

Brightlines.com | 1-412-206-0106




Safety

- Fixture installation should be performed in accordance with local and national codes. All fixtures must be properly grounded.
- To prevent fire or electric shock, do not expose the fixtures to water or moisture. VideoPlus fixtures are listed for indoor use only.
- A qualified technician should perform service on fixtures. Do not remove the low voltage cable until the unit has been de-energized.


Installation

STEP 1: HANGING THE FIXTURE

- A. Hang the fixture to the super-structure above the intended location.
- It is imperative that you hang the fixture.
 - It can weigh up to 50lbs. and the T-grid will not be able to support such weight.

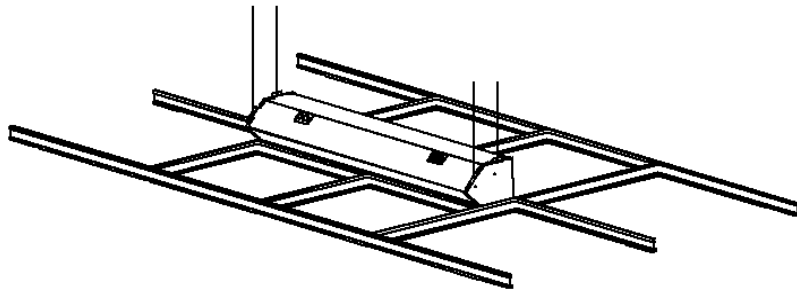


- B. Before lowering the fixture onto the T-grid rails, install the louver (it will be easier to install louver now versus later on).
- Install louver by pushing louver into the assembly at an angle.
 - Next rotate the louver until you can shift the louver into the fixture.
 - Adjust the louver so that it is horizontal and so that the gel frame is in alignment with the louver.

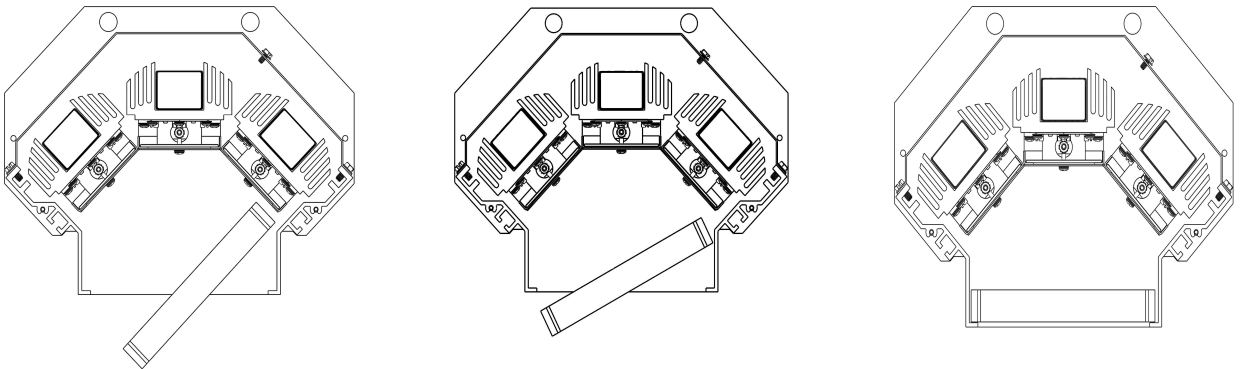


DALI Riser

AV Processor Option

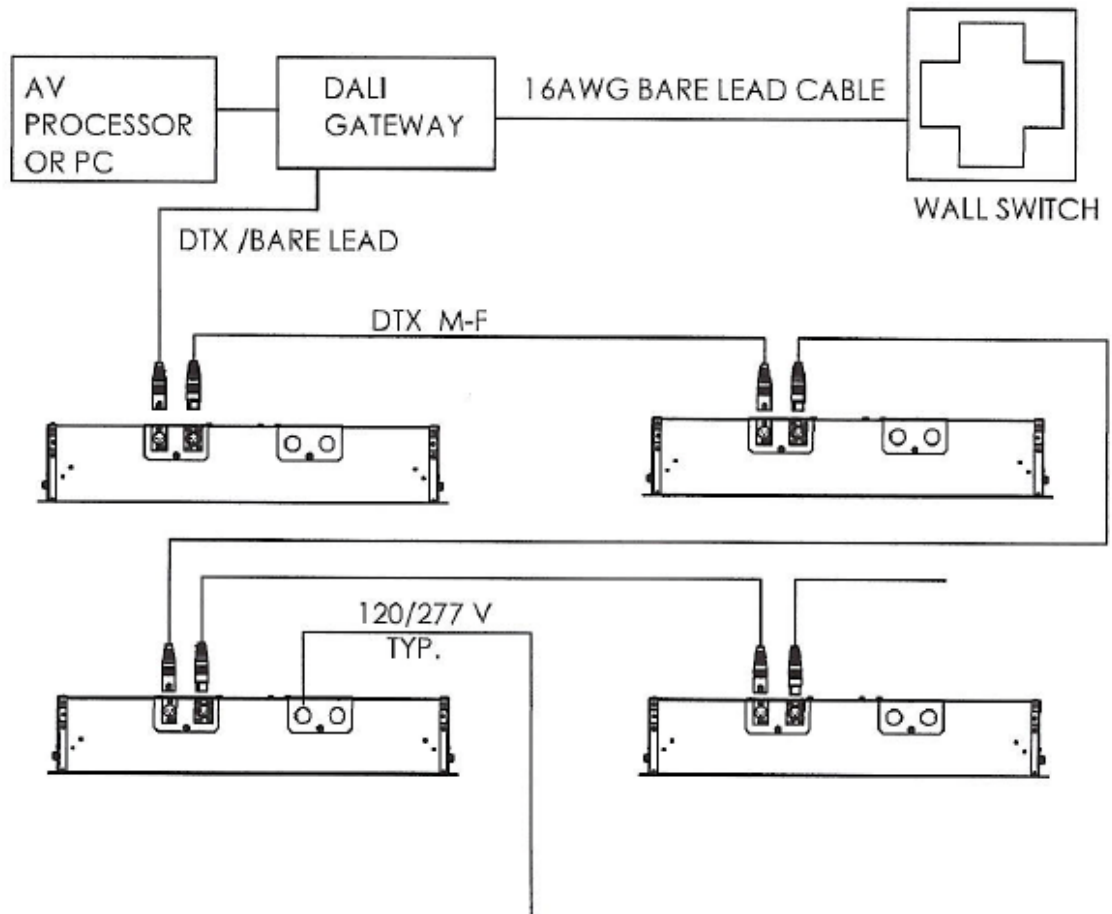

DALI Riser

Stand-Alone Option

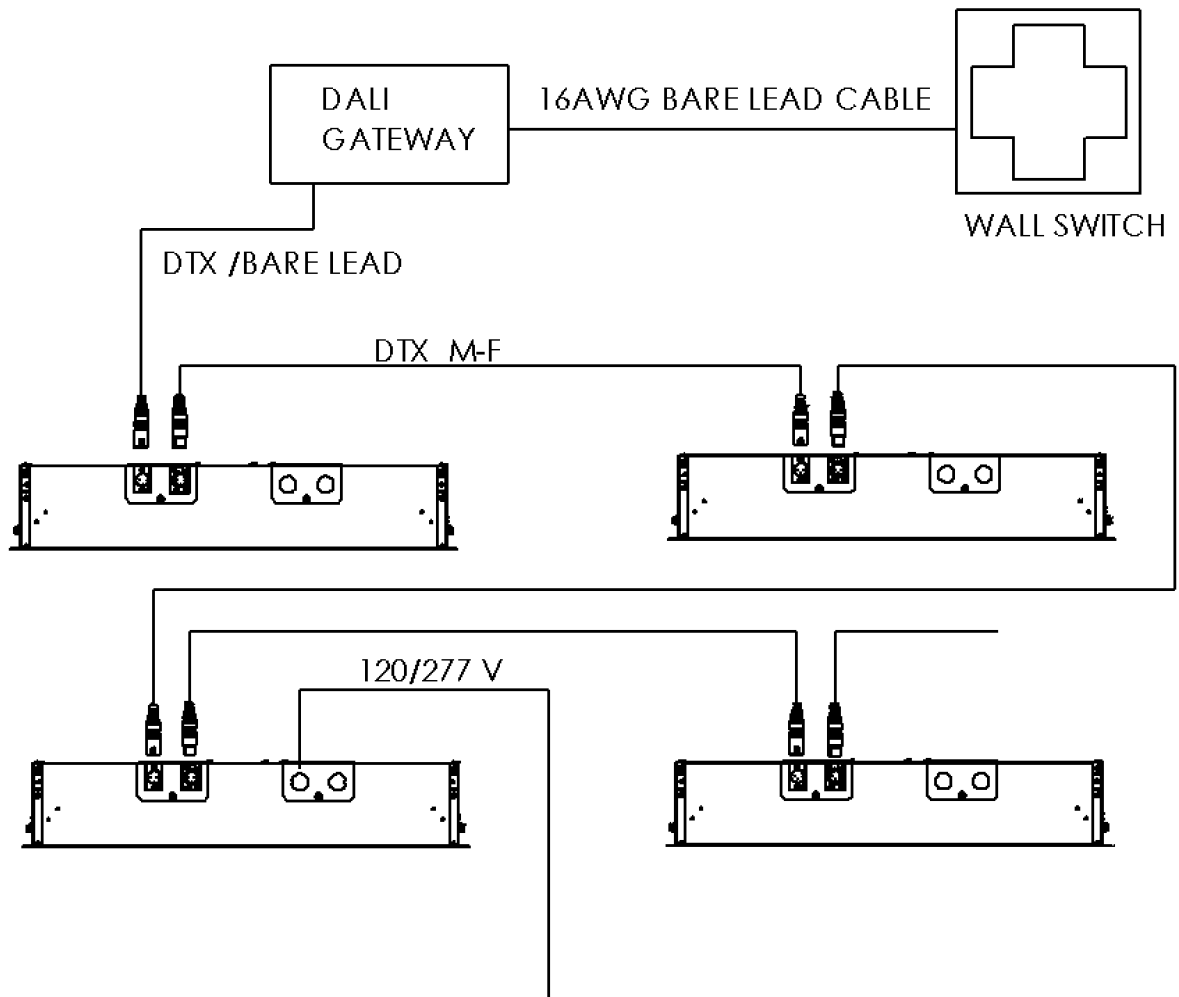

580 Mayer Street, Building #9, Bridgeville, PA 15017, USA

Brightlines.com | 1-412-206-0106






Power for the DALI network is provided by a separate power supply. Installation instructions are included with DALI Gateway.

Each fixture requires a source of unswitched AC power. For clarity, only one fixture's power feed is shown.

0-10V Riser

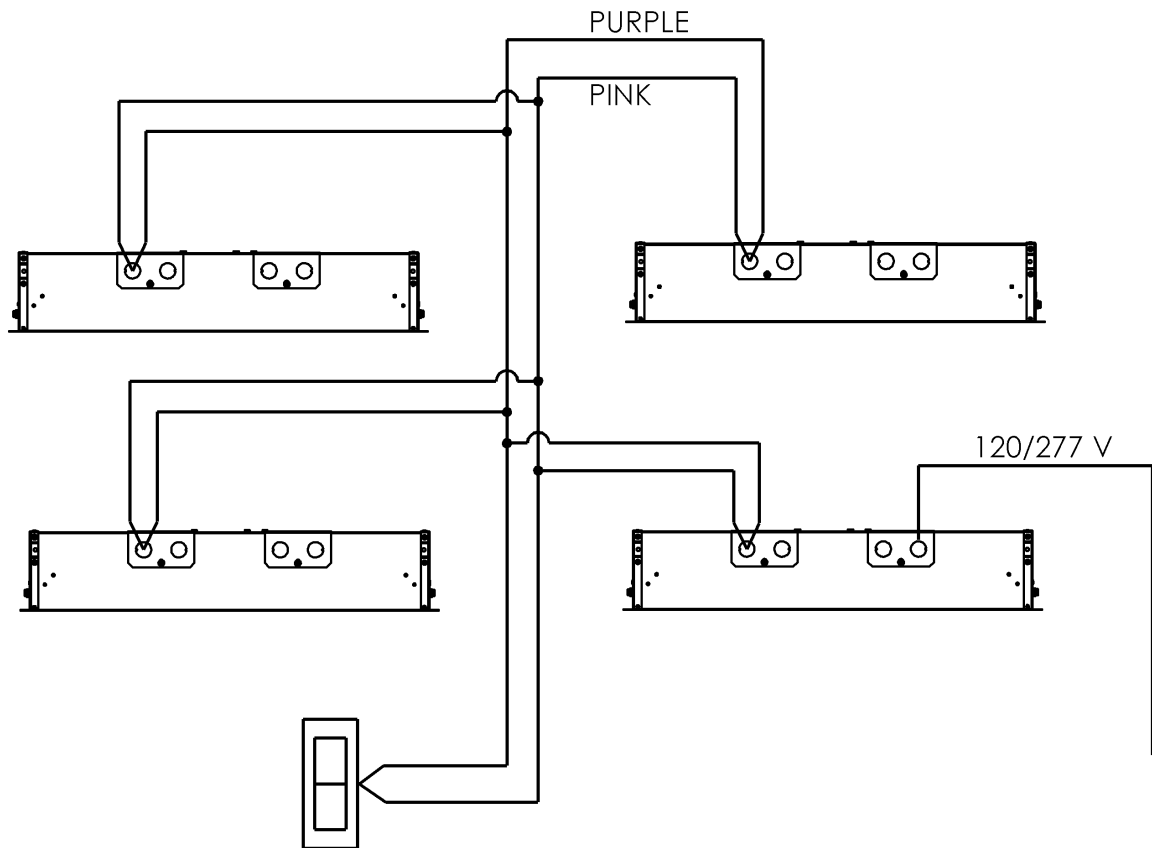

Notes:

Fixture provided with one 0-10V driver

0-10V Dimming - 150 μ A source current from driver


580 Mayer Street, Building #9, Bridgeville, PA 15017, USA

Brightlines.com | 1-412-206-0106



DMX Riser

Stand-Alone Option

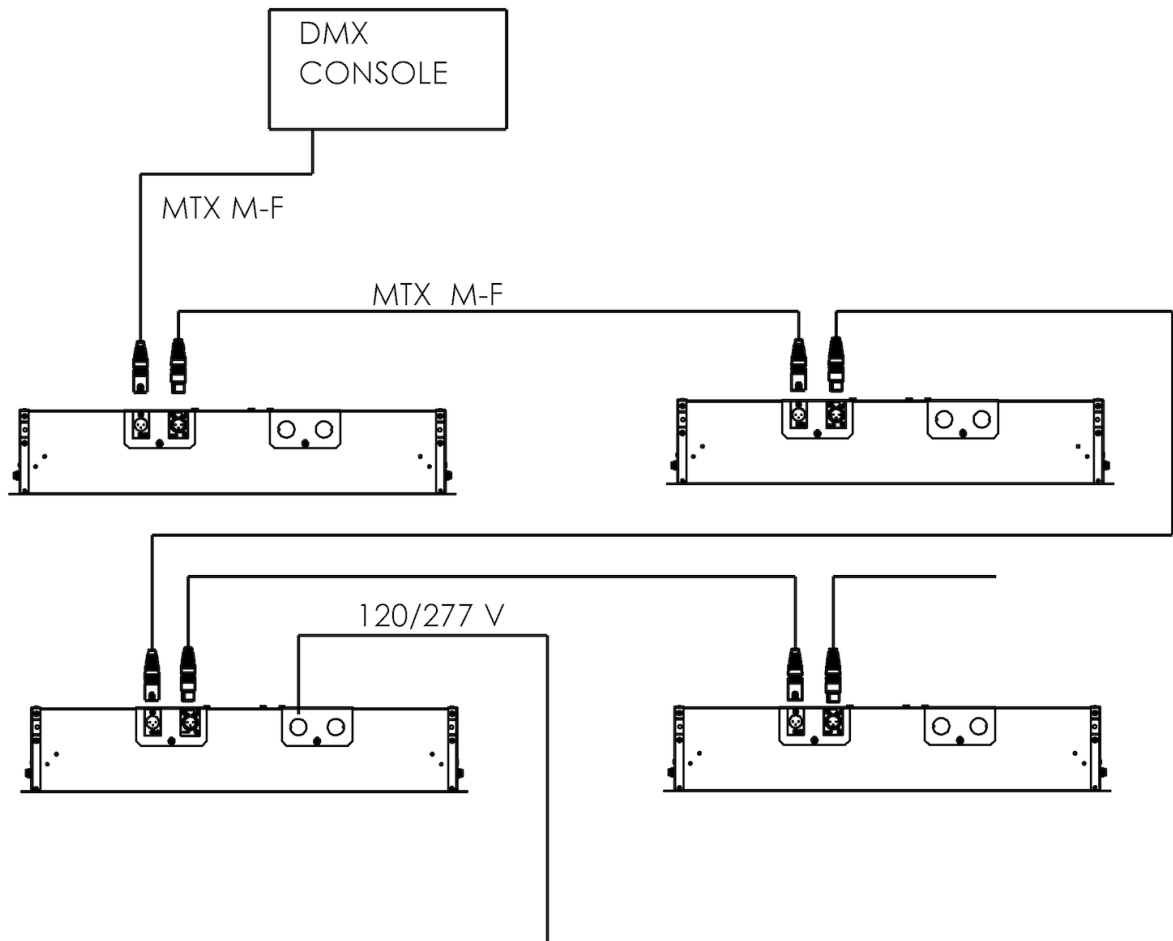

580 Mayer Street, Building #9, Bridgeville, PA 15017, USA

Brightlines.com | 1-412-206-0106



Trouble Shooting Guide

Problem	Possible Cause	Solution
Lights flicker or drop out at low end	Driver not configured properly	Consult factory
Lights are flashing or strobing	• Loose cable connection • Insulation may be covering fixture	• Make sure cable is secure • Remove any insulation surrounding fixture

Maintenance

The LEDs are rated for up to 50,000 hours. However, as with all LED there will be some drop-off in intensity as they approach their rated life. We recommend that as the LED intensity begins drop off, or when the life expectancy is reached, all room fixtures are replaced as a group.